KURYAKYN

INSTALLATION INSTRUCTIONS

L.E.D. SADDLEBAG HINGE ACCENTS FOR TOURING, CHROME

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

1

A CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Hinge Accent
- 1 Right Hinge Accent
- 1 Run Turn Brake Controller
- 1 Hardware Kit, containing:
 - 2 Alcohol Pads
 - 2 Single Sided Foam Tape


- Hardware Kit, containing CONTINUED:
 - 1 Dielectric Grease Pack
 - 12 6 Inch Cable
 - 6 Cord Keeper
 - 8 Cable Tie Mount

YOU WILL ALSO NEED:

Hex wrench set, Phillips head screwdriver, torx screwdriver set, drill and drill bits, center punch, warm soapy water and a clean rag

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.
- **STEP 2** Remove the motorcycle's seat to gain access to the battery and rear lights wiring harness. Set the seat on a flat clean surface off to the side.
- **STEP 3** Refer to PIC 2. Locate provided Run Turn Brake Controller. Disconnect the rear lights from the existing wiring harness. Apply a small amount of dielectric grease to each end of the controller connectors. Connect the controller to the bike's rear lights and wiring harness.
- **STEP 4** Refer to PIC 3. Locate the Left and Right Hinge Accents. Connect the accents to the controller; the left accent to a "Left Output" connector and the right accent to a "Right Output" connector.

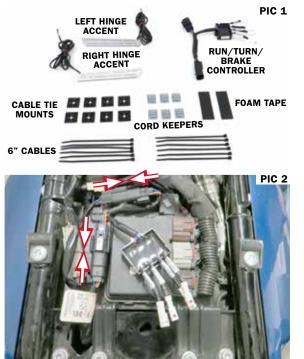

KURYAKYN.COM 866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



5476

KURYAKYNIJ

INSTALLATION INSTRUCTIONS

L.E.D. SADDLEBAG HINGE ACCENTS FOR TOURING, CHROME

-CONTINUED-


- STEP 5 Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect accents after operational testing. Set them aside for the time being. Remove main fuse.
- STEP 6 Refer to PIC 4. Open saddlebag and disconnect the check strap from the lid of the saddlebag. Let the lid rest fully open on the outside of the saddlebag. Set hardware aside, it will be reused.

Note: It is suggested to place a soft cloth between the outside of the saddlebag and the lid when it is fully opened to prevent damage.

STEP 7 Refer to PIC 5 and 6. Unfasten the hinge cover from the hinge and lock. Remove the hinge cover. Set hardware and hinge cover aside, they will be reused.

> Note: Pay attention to the order and location of which you remove the hardware and parts from the hinge cover. This information will be useful during the re-installation process.


- STEP 8 Refer to PIC 7. Locate provided Right Hinge Accent. On the back side of the hinge cover, align the accent over the area where it will be installed. Use a sharpie to mark where the wiring lines up.
- MEASURE TWICE DRILL ONCE. DOUBLE CHECK ALL REFERENCE NOTICE MARKS MADE ON THE SADDLEBAGS BEFORE DRILLING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION.
- STEP 9 Refer to PIC 8. Lightly drill 1/4" hole into the back of the hinge cover, where the sharpie mark was made. Do not drill all the way through, but just enough so that you can press on the back side of the reflector to push it out.
- **STEP 10** Refer to PIC 9. Once reflector has been removed from the hinge cover, finish drilling 5/16" hole all the way through the back side of the hinge cover. Fully clean the front side of the hinge cover, where the reflector was removed from.

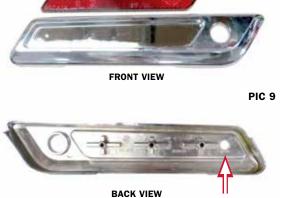

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



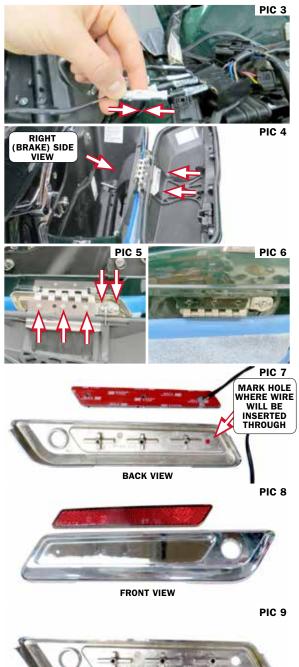

5476

KURYAKYN

INSTALLATION INSTRUCTIONS

L.E.D. SADDLEBAG HINGE ACCENTS FOR TOURING, CHROME

-CONTINUED-

STEP 11 Refer to PIC 10. Using warm soapy water and a clean rag, remove all dirt, debris, and adhesive from the installation area; allow the area to dry completely.

Wipe the installation area with the included alcohol pads to remove any wax or polish; allow the area to dry completely.

- **STEP 12** Refer to PIC 10. From the front side of the hinge cover, insert the connector and wire of the hinge accent through the drilled hole.
- **NOTICE** ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

STEP 13 Refer to PIC 11. Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing. Align the hinge accent; press into place for one minute; full bonding will occur after 24 hours.

Note: If the bike is going to be operated before full bonding occurs, secure the hinge accent to the bike with a good quality masking or painter's tape.

STEP 14 Refer to PIC 12 and 13. Locate hardware that was removed in Step 7. Reinstall the hinge cover to the saddlebag hinge, and refasten the lock to the cover, in the reverse order of which it was removed in Step 7.

Note: Be sure the accent's wire is not located under the hinge, or in a position where it would pinch or cause damage to the wire.

STEP 15 Refer to PIC 14. Locate and apply a small amount of dielectric grease to each of the output connectors on the controller. Connect the accent connector to the controller; the left accent to a "Left Output" connector or the right accent to a "Right Output" connector.

Note: There are two (2) Left and Right Outputs. The accents will use one (1) of each. The additional outputs are for connecting additional light products, or can be left unused.

- **STEP 16** Reinstall main fuse and retest lights for proper run/turn/brake operations.
- **STEP 17** Reattach the saddlebag check strap to the saddlebag lid, using the hardware that was removed in Step 6.



KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



5476

KURYAKYN

INSTALLATION INSTRUCTIONS

L.E.D. SADDLEBAG HINGE ACCENTS FOR TOURING, CHROME

-CONTINUED-


STEP 18 Refer to PIC 15 through 17. Use provided Cable Ties, Cord Keepers, and Cable Tie Mounts to fasten the accent's cord in and around the saddlebag. Be sure to fasten the wires where they won't pinch, pull, or be damaged. Provide enough slack in the wire right at the hinge, to allow the lid to open and close fully.

Note: Fully clean all surface areas where mounts and cord keepers will be adhered to.

STEP 19 Refer to PIC 18. Located provided foam tape. Test fit the foam tape on the edge of the saddlebag where the accent's cord will rest when the saddlebag is closed. Clean the surface area, remove the backing from the foam tape and place it in desired position.

Note: Adjust the size of the foam tape as needed.

- **STEP 20** Repeat Steps 6 through 19 for opposite side.
- **NOTICE** IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

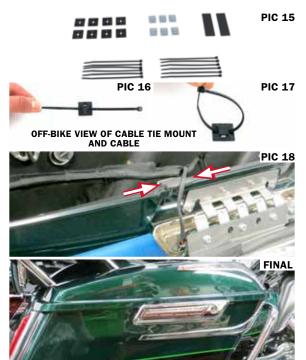

5476

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025

