

INSTALLATION INSTRUCTIONS

TRACER HEADLIGHT VENT ACCENTS FOR ROAD GLIDE

2947

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Left (Clutch Side) Accent	4	Well Nuts	8	Cable Tie Mounts
1	Right (Brake Side) Accent	4	#8-32 x 5/8" Screws	6	Cord Keepers
2	Wiring Adapters	12	6" Cable Ties	2	Alcohol Pads

YOU WILL ALSO NEED:

Standard hex bit set, ft-lbs (Nm) torque wrench, electric drill, 5/16" drill bit, masking tape

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

NOTICE THIS PART WILL REQUIRE DRILLING INTO OEM PARTS. BE SURE TO MEASURE TWICE, DRILL ONCE, AND ALWAYS DOUBLE CHECK THE REFERENCE MARKS MADE BEFORE DRILLING.



STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Remove main fuse.

STEP 3 Refer to PIC 2. Apply masking tape to each side of the headlight casing where it will be drilled through. Be sure to cover the whole area, not just the drill point.



STEP 4 Refer to PIC 3. Locate the Left (clutch side) and Right (brake side) Vent Accents. Working on one side at time, align the accent in the air duct area next to the headlight. Use the mounting holes on the accents to mark two (2) drill hole points on the headlight casing. Make sure when marking the drill holes the accent doesn't move at all! Set the accents aside for now. **DO NOT DRILL YET!**



INSTALLATION INSTRUCTIONS

TRACER HEADLIGHT VENT ACCENTS FOR ROAD GLIDE

2947

-CONTINUED-

- STEP 5** Refer to PIC 4. Unfasten and remove windshield. Unfasten the outer fairing (from driver's side: two lower screws and one screw under speaker cover on each side), disconnect the turn signal wires located near the top of the outer fairing, and remove the outer fairing.

Note: Refer to motorcycle's service manual for additional assistance.

- STEP 6** Refer to PIC 5. Locate provided Run Turn Wire Adapters. Connect an adapter to each turn signal wire harness on the motorcycle.

- STEP 7** Locate the Left (clutch side) and Right (brake side) Vent Accents. Connect the left accent to a left wiring adapter and the right accent to a right wiring adapter.

- STEP 8** Reinstall main fuse and test accents for proper run/turn operations. Disconnect accents after operational testing. Set them aside for the time being. Remove main fuse.

NOTICE

MEASURE TWICE – DRILL ONCE. DOUBLE CHECK ALL REFERENCE MARKS MADE ON THE HEADLIGHT CASING BEFORE DRILLING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION.


- STEP 9** Refer to PIC 6. Drill a small pilot hole on the mark made for the mounting holes of the vent accents. Drill all the way through the headlight case, but be careful not to drill too far beyond the casing, to prevent damaging the actual lights. Increase the drill hole to a 5/16 inch hole.

- STEP 10** Locate provided well nuts. Test fit that the well nut fits into the drilled hole. If the well nut does not fit in the drilled hole, make small adjustments to it. Test again. Repeat process until the well nut fits into the drilled hole. **DO NOT OVER DRILL AND MAKE THE HOLE TOO LARGE!**


- STEP 11** Refer to PIC 7. Remove tape from headlight casing. Thoroughly clean the surface. Place well nuts in drilled holes.

- STEP 12** Refer to PIC 8. Locate provided four (4) screws. Loosely secure the vent accents to the well nuts. Connect the wires of the accents to their corresponding wire adapters. Connect the OEM turn signals to the adapters.

PIC 4

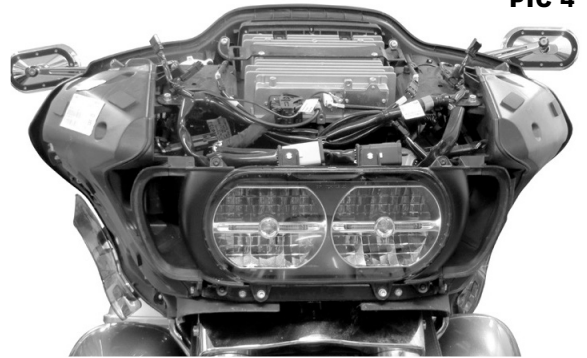

PIC 5

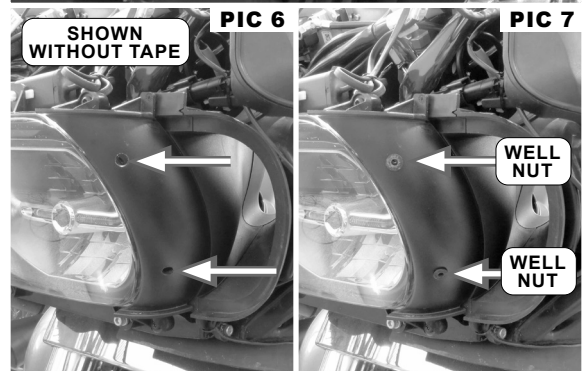

PIC 8



INSTALLATION INSTRUCTIONS


TRACER HEADLIGHT VENT ACCENTS FOR ROAD GLIDE

2947

-CONTINUED-


- STEP 13** Refer to PIC 8 (on page 2). Locate provided cable ties, cable mounts and cord keepers. Secure all wires in a safe place. Be sure to secure the wires where they won't pinch, pull, or be damaged.

Note: Refer to PIC 9 and 10. Above the top corners of the headlight there is a plastic tab sticking out. The accent wires come out just below this tab. When routing the wire to under the fairing area, be sure the wire is placed under and around the tab, not over it.

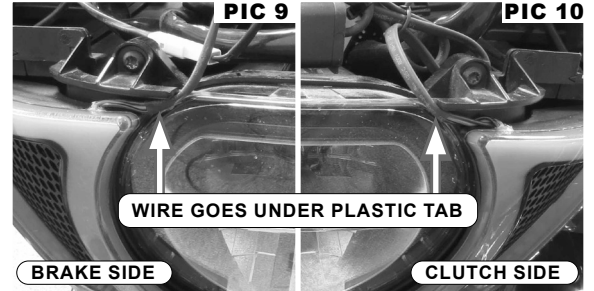

- STEP 14** Unfasten the accents from well nuts, but do not disconnect the wiring. Let the accents carefully hang by their connected cables.

- STEP 15** Refer to PIC 11 and 12. Locate the outer fairing and two (2) OEM upper fairing screws (under speaker cover screws) that were removed in Step 5. Align the outer fairing with the inner fairing, and route the new accents through the opening. Loosely secure the outer fairing to the inner fairing using a speaker screw on each side.

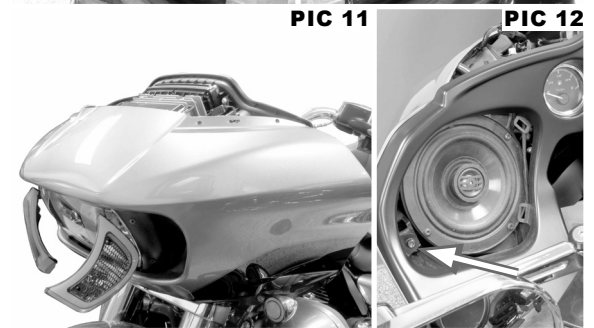

- STEP 16** Refer to PIC 13. With the outer fairing in place, align the vent accents with the air ducts. Secure the vent accents to the well nuts. Fully tighten all hardware.



- STEP 17** Connect the OEM turn signals, on the inner fairing, to the adapters. Secure all wires in a safe place. Be sure to secure the wires where they won't pinch, pull, or be damaged. Fully reinstall the outer fairing and windshield, using hardware and parts removed in Step 5.

TORQUE VALUE FOR OUTER FAIRING UPPER SCREWS (NEAR SPEAKERS):
20-30 in-lbs (2.3-3.4 Nm)

TORQUE VALUE FOR OUTER FAIRING LOWER SCREWS (ALSO AIR DEFLECTOR):
8-15 in-lbs (0.9-1.4 Nm)

TORQUE VALUE FOR WINDSHIELD SCREWS:
8-12 in-lbs (0.9-1.4 Nm)

NOTICE

THE VENT ACCENTS MUST BE REMOVED FROM THE FAIRING AIR DUCTS BEFORE THE OUTER FAIRING IS EVER REMOVED. THE OUTER FAIRING CANNOT BE PROPERLY REMOVED WITH THE ACCENTS IN THE AIR DUCTS.

- STEP 18** Reinstall main fuse and test accents for proper run/turn operations.

INSTALLATION INSTRUCTIONS

TRACER HEADLIGHT VENT ACCENTS FOR ROAD GLIDE

2947

-CONTINUED-

⚠ WARNING ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice