



INSTALLATION

DELUXE ISO BRAKE PEDAL PAD FOR HARLEY FL AND METRIC

7589

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

PARTS INCLUDED

- 1 Chrome Brake Pedal Base
- 1 Rubber Insert
- 1 Chrome Rubber Insert Retainer
- 1 1/4-20 X 1/2" Button Socket Head Cap Screw
- 1 Flat Washer
- 1 1/4-20 X 5/8" Button Socket Head Cap Screw
- 1 1/4-20 X 5/16" Set Screw
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches, Drill, Drill Bits

NOTE: No drilling will be required for Harley Davidson applications.


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

STEP 2 Remove the stock brake pedal pad.

FOR H-D APPLICATIONS

STEP 3 Align the chrome brake pad base to the brake pedal and determine which hole in the base lines up with the hole in the brake pedal. PIC 1

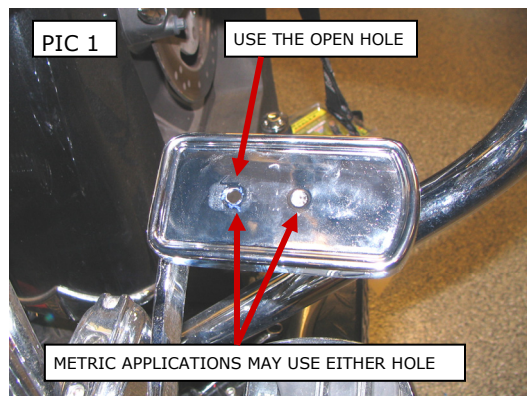

-cont.-

7589-21MC-0111

kuryakyn.com




©2005 Kuryakyn USA® All Rights reserved.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

ABOUT OUR CATALOG
For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


STEP 4 Assemble the new brake pad by inserting the chrome rubber retainer through the rubber insert and set into the chrome base. Turn the assembly over and insert the 1/4-20 set screw into the hole that will not be used to attach the pad to the pedal that was determined in Step 3. PIC 2

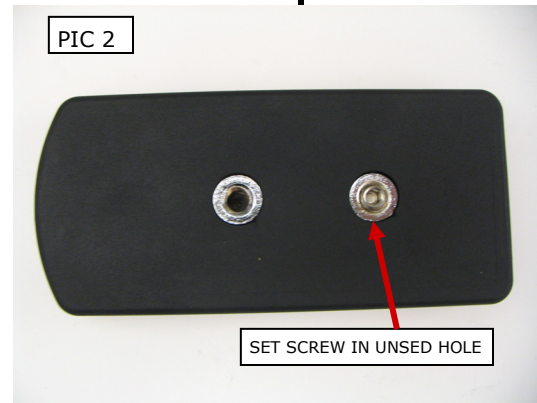

STEP 5 Determine which of the button socket head cap screws you will need to use along with the flat washer and fasten the pad assembly to the brake pedal with them. PIC 3 and PIC 4

FOR METRIC APPLICATIONS

STEP 6 Using the new brake pad base, mark one of the holes to the brake pedal. Use a center punch to mark the exact center of the hole to be drilled. The final bit size needs to be 1/4". You may want to use smaller pilot bits to start with. PIC 1 and PIC 5

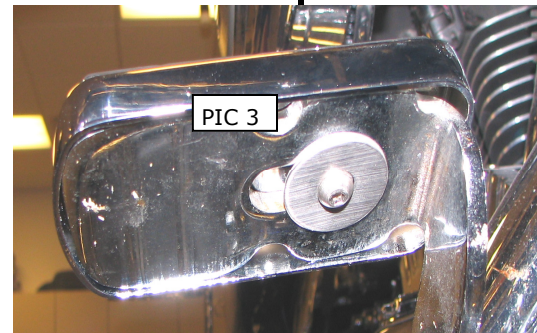

STEP 7 Assemble the new pad by inserting the chrome retainer through the rubber insert. Set this onto the chrome base and from the backside thread the set screw into the hole not used from Step 6. PIC 2

STEP 8 Determine which of the button socket head cap screws you will need to use along with the flat washer and fasten the pad assembly to the brake pedal with them. PIC 3 and 4



ATTENTION!

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

