



Quantum® Hardcoated Polycarbonate
VStream® Windscreen for:
2024-Current Honda® NX500



N20079 Dark Tint, Sport
N20080 Light Tint, Sport-Tour
N20081 Clear, Touring



VStream® Windscreen Patent No. 7,387,328

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Description:	VStream® Replacement Windscreen	Model:	2024-Current Honda® NX500
Part Number:	N20079/N20080/N20081	Installation Time:	15 min. Difficulty Level: Easy

CONTENTS OF KIT

ITEM	DESCRIPTION	QTY.
A	VStream Windscreen	1

TOOLS REQUIRED

5mm Hex Wrench or Allen Key

ALL OEM FASTENERS

WILL BE REUSED.



ATTENTION: Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



NOTE: Tips for facilitation of operation, control and adjustment, as well as maintenance work.



Step 1

PREPARATION

Place motorcycle securely on its stand.

Step 1

With a 5mm hex key, remove the four 5mm hex screws and washers securing the OEM windscreen to the bracket. Remove OEM windshield. Wellnuts remain in place in the mounting bracket.


Step 2

Note the Wellnuts in the mounting bracket. They should be in the highest position in their slots as shown in the illustration below before mounting the new windscreen.



Step 2



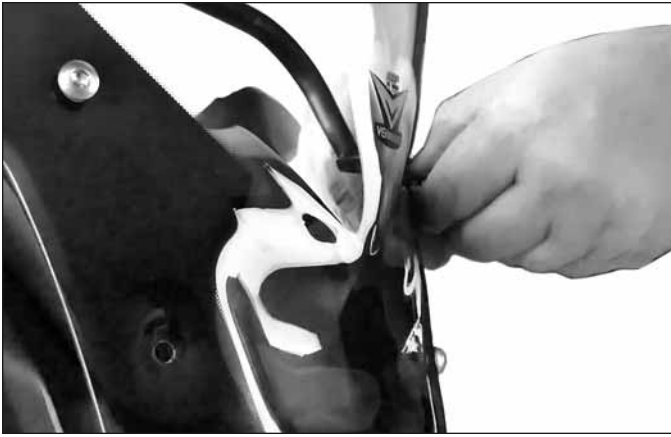

Step 3



Step 4



Step 5

INSTALLATION

Step 3

Position your new VStream Windscreen onto the mounting bracket, aligning the mount holes with the Wellnuts.

Insert the OEM screws and washers into the Wellnuts and tighten by hand.

Step 4

Now use your 5mm hex key to tighten all four mounting screws.



NOTE: Do not overtighten mounting screws.



NOTE: Use of threadlocking products on mounting screws will void your windscreen warranty.

Step 5

The installation is now complete.

Double-check your work for fit and tightness before riding.

Ride safe and enjoy your new VStream Windscreen!



CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dish-washing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your wind-screen clear in rainy weather.



Register Your Windshield Online at www.nationalcycle.com

National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit www.nationalcycle.com for further details, or call 708-343-0400 or e-mail info@nationalcycle.com.

WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.