


INSTALLATION AND OWNER'S MANUAL

N5545 for Harley Davidson FLHRS



Wrench, 1/2" Wrench,7/16" Screwdriver, 3/8" Flat

PARTS LIST			
Index	<u>Description</u>	Part No.	Qty.
1	Shield, Hand Deflector	20-231006-000	2
2	Plate, Outside	37-370900-000	2
3	Nut, /-20 Acorn	42-480000-000	4
4	Screw, /-20 x fi, Nylon	50-530505-000	4
5	Bracket, Left	37-370915-000	1
6	Bracket, Right	37-370916-000	1
7	Washer, 3/8" Int. Lock	49-492310-000	2

NOTE: Left and right side of motorcycle are determined from rider's perspective while sitting on motorcycle.

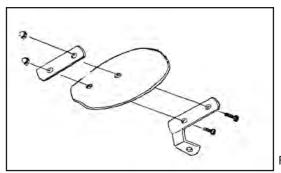


Figure 1

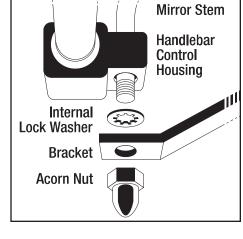


Figure 3

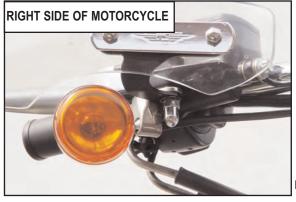


Figure 2



Figure 4

PREPARATION

Assemble the Hand Deflector plastic to the Right and Left brackets as shown in **Figure 1.** Note, screws are inserted through the bracket from the INSIDE of the plastic. Place the outside plate (2) over the screws (4) and add the nuts (3). Tighten until snug, do not over tighten. **(7/16" Wrench and Screwdriver)**

INSTALLATION

- 1. From the underside of the right grip, remove the right mirror nut. (Wrench, 1/2")
- 2. Install the right hand deflector assembly with lock washer and stock nut. Tighten the mirror nut to 1.8 m-kg (13 ft lbs.) torque. (Wrench, 1/2") Figure 2 and 3
- 3. Repeat for left side. Figure 3 and 4



Check clearance of Hand Deflector to gas tank by turning handlebar to a full lock left and right. If necessary adjustment Hand Deflector by rotating bracket (5) or (6) until plastic does not contact gas tank.

MAINTENANCE To clean the plastic, wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dish washing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton with Naphtha or Turpentine followed by a wash as above.