



AKRAPOVIC SLIP-ON EXHAUST SYSTEM for the BMW G450X (2008-2009)

Congratulations on purchasing an Akrapovic exhaust system. Please read these installation instructions carefully. If you have any trouble installing the system please contact your authorized dealer!

IMPORTANT INFORMATION

Exclusion of Certain Liability

- The manufacturer, importer or dealer shall not be liable for any incidental damage including personal injury or any
 other damages caused by improper installation or operation of the Akrapovic exhaust system. When installing the
 Akrapovic exhaust system be careful that the exhaust system does not touch other parts sensitive to high
 temperature.
- Akrapovic makes no representation or warranties with regard to damage caused by the improper installation, use and
 maintenance of the Akrapovic exhaust system. The warranty is limited to defects recognized by our technical
 department and to normal use, and excludes items subject to normal wear (gaskets and damping wool). The
 quarantee is void in case of accident, modification, improper or competition use.
- Do not attempt to install the Akrapovic exhaust system on a motorcycle for which it was not made or tested by Akrapovic.
- 4. When the exhaust system gets very hot during operation, be careful not to burn yourself on the exhaust system or parts which are in direct contact with it, even when the motor is not running. Also protect other people, especially children, from the injuries mentioned above.
- In some cases Akrapovic exhaust system kits contain chemical products (ceramic anti-seizing grease; bolt sealant).
 Handle with care, do not inhale or swallow. Avoid excessive contact with skin, eyes or mucous membranes. Keep out of reach of children.
- 6. Technical specifications of Akrapovic exhaust systems and related products subject to change without notice.

Trademarks

The Akrapovic Exhaust System Technology logo is a registered trademark of Akrapovic d.d.

Akrapovic website

Information about Akrapovic exhaust systems and related products is available on the Akrapovic website at:

http://www.akrapovic.com/


Copyright

No part of the Akrapovic exhaust system or its documentation may be reproduced or distributed in any form or by any means without the prior written authorization of the Akrapovic company.

© Akrapovic, d.d. All rights reserved.

Symbols

The following symbols are used throughout these installation instructions:











USE BOLT SEALANT; Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening bolts. **WARNING!** Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of the reach of children.



USE ANTI-SEIZING GREASE (white tube); Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system. **WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of the reach of children.**



USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube); Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact. WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of the reach of children.

INSTALLATION INSTRUCTIONS

- Z
- BEFORE INSTALLING CHECK SCHEMATIC OF THE EXHAUST SYSTEM!
- IF ANY ITEMS IN THE AKRAPOVIC EXHAUST SYSTEM PACKAGE ARE MISSING PLEASE CONTACT YOUR AUTHORIZED DEALER. KEEP THE SCHEMATIC FOR FUTURE REFERENCE.
- THESE INSTALLATION INSTRUCTIONS MUST BE READ CAREFULLY IN ORDER TO ENSURE PROPER INSTALLATION AND OPERATION OF THE AKRAPOVIC EXHAUST SYSTEM.
- THE EXHAUST SYSTEM CAN BE EXTREMELY HOT. ALLOW THE MOTORCYCLE TO COOL DOWN BEFORE BEGINNING INSTALLATION.
- Z

WE ADVISE YOU TO LEAVE INSTALLATION TO A QUALIFIED SERVICEMAN. IMPROPER INSTALLATION MAY RESULT IN A SHORTER LIFETIME OF THE EXHAUST SYSTEM AND/OR DAMAGE TO THE MOTORCYCLE.



- T-handle 8mm wrench
- T-handle 10mm wrench
- T-handle 13mm wrench
- T-handle 4mm three hexagon key wrench
- T-handle 5mm three hexagon key wrench

REMOVAL OF STOCK EXHAUST SYSTEM:

- 1. Put the motorcycle on a side stand, we recommend a racing stand. Make sure, that surface is solid and flat.
- 2. For easier access to the muffler remove the rear right panel (Figure 1, 2, 3, 4).



Figure 1



Figure 2



Figure 3



Figure 4

3. Unscrew the bolt from the metal clamp at the link pipe – header tube joint (Figure 5). Unscrew and remove the bolt from the metal bracket for the link pipe (Figure 6).







Figure 6

4. Unscrew and remove the bolt from the muffler metal bracket and remove the muffler, stock graphite gasket and metal clamp (Figure 7, 8, 9, 10).



Figure 7



Figure 8



Figure 9




Figure 10

INSTALLATION OF THE AKRAPOVIC SLIP-ON EXHAUST SYSTEM:

1. Install the press-on nut onto the link pipe (Figure 11, 12).







2. Coat the bolt and interior of the metal clamp with Akrapovic anti-seize lead-free copper paste (black tube) and correctly install the metal clamp onto the link pipe (Figure 13). Install graphite sleeve gasket into the link pipe (Figure 14).



Figure 13



 Correctly position the carbon-fiber clamp and slide it onto the muffler - bear in mind the left offset of the carbon-fiber clamp viewed from the rear. WARNING! open the clamp slightly wider than the diameter of the outer sleeve of the muffler - do not scrape it along the muffler outer sleeve! (Figure 15).



Figure 15

4. Correctly position the muffler with the link pipe and slide them onto the header tube (Figure 16). Hand tighten the bolt of the link pipe bracket (Figure 17).







Figure 17

5. Attach the carbon-fiber clamp to the stock chassis hanging bracket – use the washer and spacers supplied in the Akrapovic kit. Do not fully tighten. Make sure the additional parts from the Akrapovic kit are correctly installed. (Figure 18, 19, 20, 21).



Figure 18



Figure 19



Figure 20



Figure 21

6. Tighten fully the bolts of the link pipe bracket, metal clamp and muffler clamp (Figure 22, 23, 24, 25). Make sure the link pipe and muffler are not touching other parts of the motorcycle.

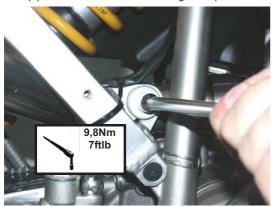


Figure 22



Figure 23



Figure 24



Figure 25

7. Reattach the rear right panel (Figure 26, 27). WARNING! remove the direction indicators (otherwise the right rear indicator could be damaged by hot exhaust gases).



Figure 26

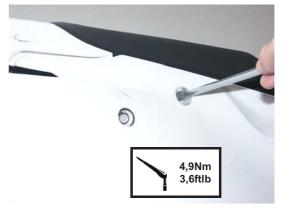


Figure 27

Final installation:

- Clean grease spots:
 - Muffler titanium outer sleeve: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40 or equivalent).
 - Muffler carbon-fiber outlet cap: use a soft dry cloth.

 - Stainless steel link pipe: use a soft cloth sprayed with a contact cleaner, then wipe with a soft dry cloth.

 Titanium inlet cap and welded link pipe: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40 or equivalent).

Cleaning will prevent spots from burning onto the surface. Do not use aggressive chemical cleaners, because they can damage the sticker.

Position of the correctly installed Akrapovic SLIP-ON system (Figure 28).



Figure 28

- Check the operation of the brakes and suspension. Make sure all the bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts repeat the adjustment of the exhaust system or contact your authorized dealer.
 - I IT IS NORMAL IF WHITE SMOKE COMES OUT OF THE MUFFLER ON FIRST OPERATION.
 - ! DO NOT STAND BEHIND THE MUFFLER ON FIRST OPERATION.
 - ! DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN AKRAPOVIC EXHAUST SYSTEMS.

MAINTENANCE OF THE AKRAPOVIC EXHAUST SYSTEM

- 1. Clean the titanium exhaust components with a multi-purpose spray lubricant (WD-40 or equivalent), carbon fiber exhaust components with soft and dry cloth and stainless steel components with soft cloth sprayed with contact cleaner, then wipe with soft and dry cloth. Do not use aggressive chemical cleaners, because they can damage the sticker. A change in the color of the exhaust system is normal due to the high temperatures.
- 2. The wearing out of the muffler silencing material depends on the type of the engine and riding style. Contact your dealer/serviceman if visible changes appear on muffler's outer sleeve or the noise level is increased.
- 3. Periodically make sure all the bolts and springs are sufficiently tight.

Product code: S-B4SO1-ZTA

